


FEATURES

(Not required for operation)


Audio System for E, EK, F, ED type

Controls Location:

LEFT HANDLEBAR CONTROLS

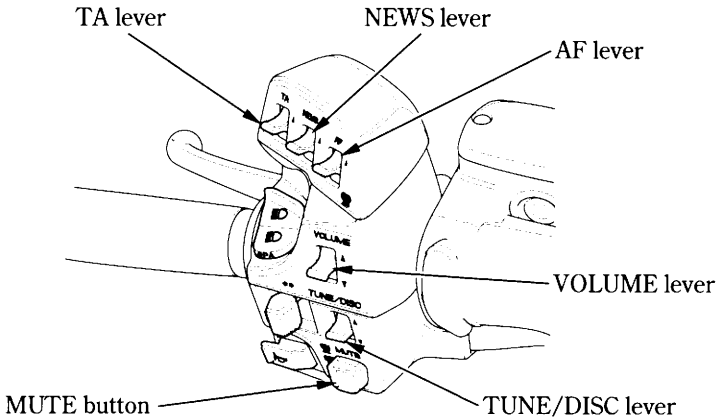

AUDIO CONTROLS BUTTONS

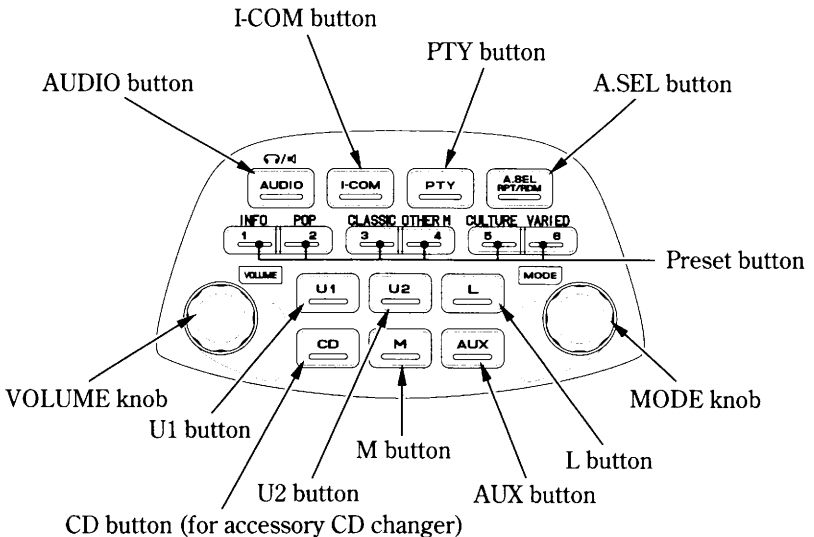

The CD lever and button function when the Honda accessory CD changer is installed. For CD operating instructions, refer to the accessory manuals.