



FEATURES

(Not required for operation)

VOLUME Control


To select the Volume control, push the VOLUME knob/button until “INTERCOM VOL” is displayed (page 72). Then, within 5 seconds, change the volume control.

- To increase the volume — push the VOLUME lever up or turn the VOLUME knob/button clockwise.
- To decrease the volume — push the VOLUME lever down or turn the VOLUME knob/button counterclockwise.


To increase or decrease the volume rapidly — push the VOLUME lever up or down and hold it down.

(VOLUME level range: from 0 to 20)

VOLUME

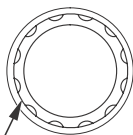

VOLUME knob/button

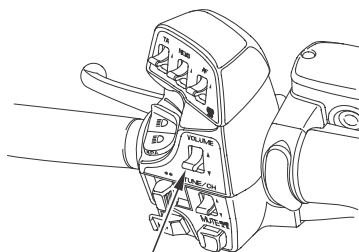

VOLUME lever

INTERCOM VOL

VOL 8

