



Engine Side Cover

Removal:

1. Carefully pull the rear of the engine side cover out until the prongs are clear of their securing slots.
2. Remove the engine side cover backward.

Installation:

- Installation can be done in the reverse order of removal.

NOTICE

Failure to use extreme care removing or installing the side covers may damage the side cover hooks.

