

2. Engine does not develop sufficient power or overheats.

Cause	Remedy
1. Incorrect ignition timing.	Adjust.
2. Clogged air cleaner element.	Clean.
3. Carbon deposits in muffler, cylinder head or on piston crown.	Decarbon.
4. Clogged cylinder fins.	Clean.