


- 5 Press the SEL button until the desired minute is displayed.
 ▶ Press and hold to advance the minute fast.

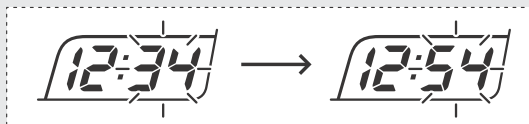


- 6 (Except E type)
 Press the SET button. The clock is set, and then the display returns to the ordinary display.
- (E type only)
 Press the SET button. The clock is set, and then the display moves to the changing of the speed and mileage unit. The speed and mileage unit will start flashing.

The adjustment can also be set by turning the ignition switch off.

2 (E type only) Changing the speed and mileage unit:

- 1 Press the SEL button to select either "km/h" and "km" or "mph" and "mile".
- 2 Press the SET button. The speed and mileage unit is set, and then the display returns to the ordinary display.

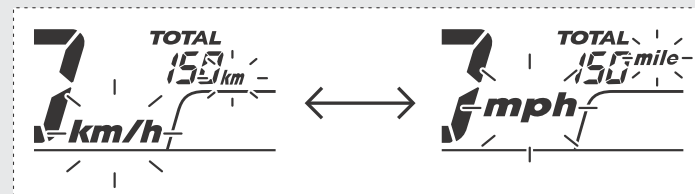

The adjustment can also be set by turning the ignition switch off.