


Fuel Valve

The fuel valve ① is mounted under the left side of the fuel tank.

“STOP” position

When the fuel valve is turned to the “STOP” position, fuel cannot flow from the fuel tank to the carburetor. Set the valve in this position whenever the motorcycle is not in use.

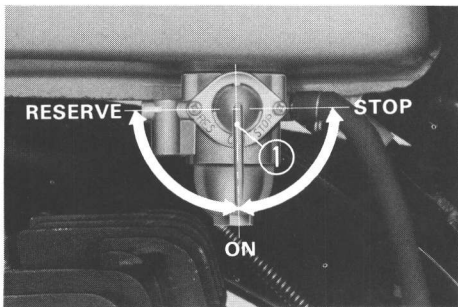

① Fuel valve

“ON” position

When the fuel valve is turned to the “ON” position, fuel will flow from the main fuel supply to the carburetor.

Set the valve in this position when the engine is to be operated from the main fuel supply.

“RES” position

When the fuel valve is turned to the “RES” position, fuel will flow from the reserve fuel supply to the carburetor.

The fuel valve should be set in this position only after the main fuel supply has been consumed. The reserve fuel supply is **0.4 U.S. gal. (1.5 ℓ)**.

When it becomes necessary to switch to the reserve fuel supply, this serves as a warning to the rider that it is time to refill the fuel tank.

After refueling return the valve to the “ON” position.