

NOTE:

Before making adjustments to the carburetor, be sure the ignition system is functioning properly, and the engine has good compression. Do not attempt to compensate for other faults by carburetor adjustment.


Throttle Grip Adjustment

The throttle grip free play should be 5~10° of the grip rotation. To adjust, proceed as follows:

1. Remove the rubber cap from the throttle cable upper adjuster ②. Loosen the lock nut ① and turn the adjuster. Turning the adjuster in direction ④ will increase the free play, and turning it in direction ③ will decrease the play.
2. To make a fine adjustment, first remove the rubber cap from the throttle cable lower adjuster ④ (see page 43). Loosen the lock nut ③, and turn the

adjuster. Turning the adjuster in direction ④ will increase the free play, and turning it in direction ③ will decrease the free play.

After adjusting, tighten the lock nut securely. Open and close the throttle to check for smooth operation and proper closing.

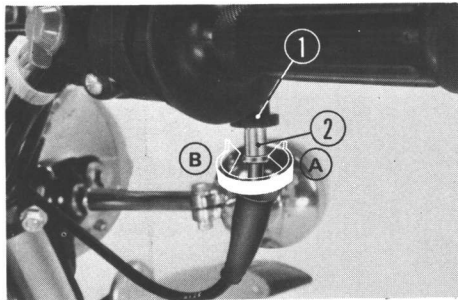

- ① Lock nut
② Throttle cable upper adjuster