


and then the front wheel can be removed.

5. To install the front wheel, follow the reverse of removal procedure outlined in steps 1 through 4.

#### NOTE :

**When installing the front axle holders, make sure the "F" mark is forward, and tighten front bolts first.**

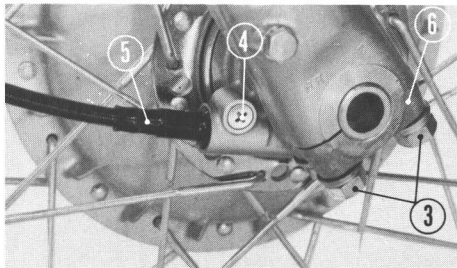


- ④ Speedometer cable set screw
- ⑤ Speedometer cable
- ⑥ Front axle holder

## Rear Wheel Removal

To remove the rear wheel, proceed as follows :

1. Place a wood block under the engine and raise the rear wheel off the ground.
2. Remove the rear brake adjusting nut ①.
3. Remove the brake panel stopper arm attaching bolt ②.

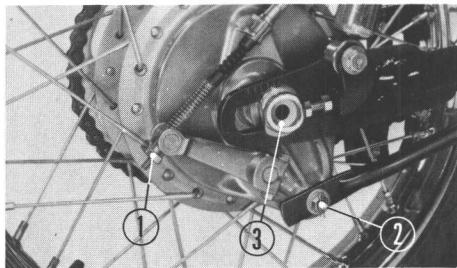

- ① Rear brake adjusting nut
- ② Brake panel stopper arm attaching bolt
- ③ Rear axle