# **Spark Plug**

## **Spark Plug Recommendation**

standard spark plug	BKR5E-11 (NGK) or
	K16PR-U11 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.


#### **NOTICE**

Using spark plugs with an improper heat range can cause engine damage.

## **Spark Plug Inspection & Replacement**

Refer to Safety Precautions on page 69.

- 1. Remove the left and right seat (page 83).
- 2. Remove the center panel by removing the screws A and screws B.

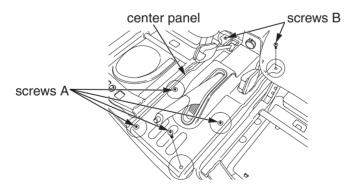

## 120 Servicing Your Honda