

Ref. No.	Description	Function
1	Speedometer	Shows riding speed.
2	Odometer	Shows total accumulated mileage.
3	Left turn signal indicator (amber)	Flashes when the left turn signal operates.
4	Oil level warning Light (red)	<p>Light should come on for 5 seconds after turning the ignition switch on, then go out, except for occasional flickering near or at the lower oil level. If light comes on and does not go out, oil level is below normal operating range; there is about 0.4 ℓ (0.42 US qt, 0.36 Imp. qt) left in the engine oil tank. Refill the oil tank as soon as possible. If light does not come on, check for a blown bulb, or weak or dead battery. Contact your authorized Honda dealer for assistance if you cannot correct the problem.</p> <p><b>CAUTION:</b>  * <i>Running the engine with insufficient oil pressure will cause serious engine damage.</i></p>
5	Right turn signal indicator (amber)	Flashes when the right turn signal operates.
6	Tachometer	Shows engine rpm.