

Ref. No.	Description	Function
7	Tachometer red zone	<p>CAUTION:</p> <ul style="list-style-type: none"> * <i>Do not allow the needle to enter the red zone even after the engine has been broken in.</i> * <i>Be careful when blipping or accelerating in the 1st or 2nd gear as the needle will enter the red zone easily.</i> <p>The red zone indicates the maximum engine speed limit and running the engine in this range will adversely affect its service life.</p>
8	High beam indicator (blue)	Lights when the headlight is on high beam.
9	Neutral indicator (green)	Lights when the transmission is in neutral.
10	Coolant temperature gauge	Shows coolant temperature (see page 20.)
11	Tripmeter	Shows mileage per trip.