


## Seat Removal

It is necessary to remove the seat for access to documents, engine oil tank and helmet holder. To remove the seat, insert the ignition key (1) and turn it to the right to unlock. Lift the seat and slide it backward. When replacing the seat, make sure hooks are securely engaged.

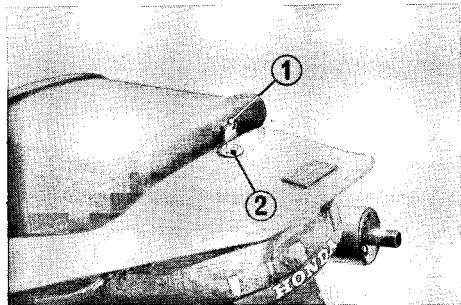

(1) Ignition key (2) Seat lock

## Storage Compartment


The storage compartment (1) is under the seat. Remove the seat.

This owner's manual and other documents should be stored in the compartment.

When washing your motorcycle, be careful not to flood this area with water.

### CAUTION:

\* *Make sure to securely lock the seat when reinstalling the seat.*

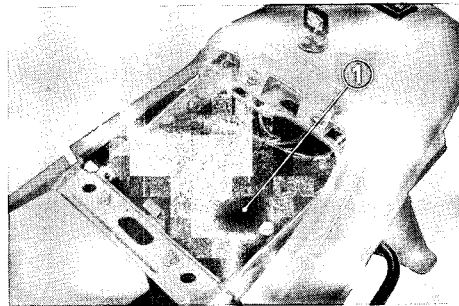

(1) Storage compartment