

## Front Wheel Removal

1. Disconnect the speedometer cable (1) by unscrewing the speedometer cable setting screw (2).
2. Remove the front brake cover setting nuts and bolts (3).
3. Raise the front wheel off the ground by placing a support block under the engine.
4. Remove the axle holder (4) by removing the axle holder nuts (5). Remove the axle (6).

5. Remove the brake disc cover (7) and separate brake caliper (8) with the brake disc from the wheel hub. Support brake caliper on a support block.

### CAUTION:

- \* *Do not hang the front brake caliper assembly to avoid damage to the brake hose.*
6. Remove the front wheel.

