


Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the rear adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3) by pushing down on the rear brake pedal.
3. Loosen the drive chain adjuster lock nut (4) and adjusting nut (5) on each side of the swingarm.
4. Remove the rear axle nut (6) and pull out the axle. Push the wheel forward and derail the drive chain from the rear sprocket.
5. Remove the wheel.

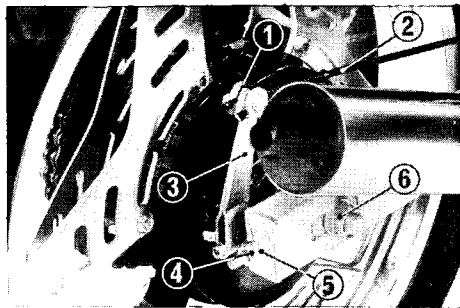

- | | |
|-------------------|-------------------|
| (1) Adjusting nut | (5) Adjusting nut |
| (2) Brake rod | (6) Axle nut |
| (3) Brake arm | |
| (4) Lock nut | |