
Stoplight Switch Adjustment

The stoplight switch (1) is on the fram behind the right side cover. Check for proper function regularly.

To adjust, turn the adjusting nut (2) in the direction (A) if the switch operates too late or in the direction (B) if the switch operates too soon.

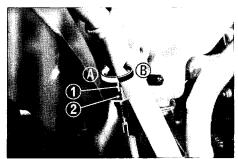

(1) Stoplight switch

(2) Adjusting nut