

CONTENTS

SERIAL NUMBER LOCATION	5
CONTROL LOCATION	6
U. K. Model	6
Australia and New Zealand Models	7
OPERATING INSTRUCTIONS	8
Ignition Switch	8
Speedometer and Indicator Light	8
Headlight Switch	9
Headlight Dimmer Switch and Horn Button	10
Turn Signal Switch (Australia and New Zealand type models only)	10
Fuel Valve	11
Filler Cap Vent Lever	11
PRE-RIDING INSPECTION	12
Gasoline Level	12
Oil Level	13
Brakes.	14
Battery Electrolyte	17
Tire Pressure	19
Electrical Equipment	20
Throttle.	24
Fuse	25
STARTING THE ENGINE	26
RIDING THE MOTORCYCLE	30
BRAKING	32