


Fuel Valve

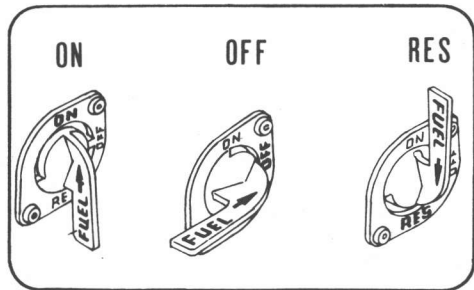

ON— Set the valve in this position when riding.

OFF— Set the valve in this position whenever the motorcycle is not in use.


RES— Set the valve in this position only after the main fuel supply has been consumed.

Reserve fuel capacity: 0.2ℓ (0.053 U.S. gal., 0.044 Imp. gal.)

NOTE

Do not operate the machine with the fuel valve in the reserve position after refuelling, or you will defeat the purpose of the reserve fuel supply.

Filler Cap Vent Lever

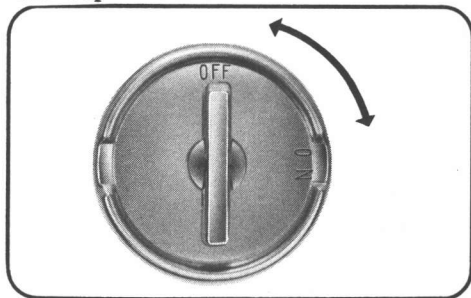

The fuel filler cap has a lever with “ON” and “OFF” positions to open or close tank vent.

ON— Set the lever in this position when running the engine.

OFF— Set the lever in this position when transporting the motorcycle.

(See page 37)