

MAINTENANCE SCHEDULE This maintenance schedule is based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.	PRE-RIDING INSPECTION	INITIAL SAFETY INSPECTION	REGULAR SERVICE PERIOD Perform at every indicated month of mileage interval, whichever occurs first.	
		1 month 300 km	12 months 1,500 km	24 months 3,000 km
AIR FILTER ELEMENT		(EVERY 6 MONTHS)	C	
CARBURETOR			I	
FUEL FILTER SCREEN		C	C	
SUSPENSION OPERATION			I	
CLUTCH SHOES FOR WEAR				I
TRANSMISSION OIL				R
DECARBONIZE CYLINDER HEAD AND MUFFLER				C
*BRAKE OPERATION AND FREE PLAY	I			
*OIL AND FUEL LEVEL	I			
*ALL LIGHTS	I			
*TRANSMISSION CASE FOR LEAKS	I			

Items marked * are simple to perform and may be serviced by the owner.

Other maintenance items should be serviced by an authorized Honda dealer, unless the owner has the proper tools, a NC50 service manual, and is mechanically proficient.