


Removing & Installing Body Components

Maintenance Lid

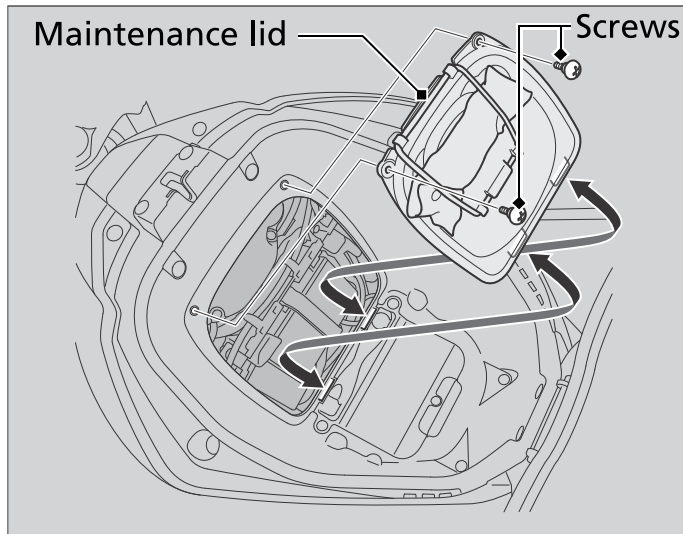

The maintenance lid must be removed to remove the battery, to service the main and fuse box fuses.

Removal

1. Open the luggage box. ▣ P. 44
2. Remove the screws.
3. Remove the maintenance lid.

Installation

1. Install the maintenance lid.
2. Install and tighten the screws.

Torque: 3 N·m (0.3 kgf·m, 2.2 lbf·ft).

3. Close the luggage box.