


Removing & Installing Body Components ► Lower Cowl

Lower Cowl

(NC700S/SA)

Maintenance

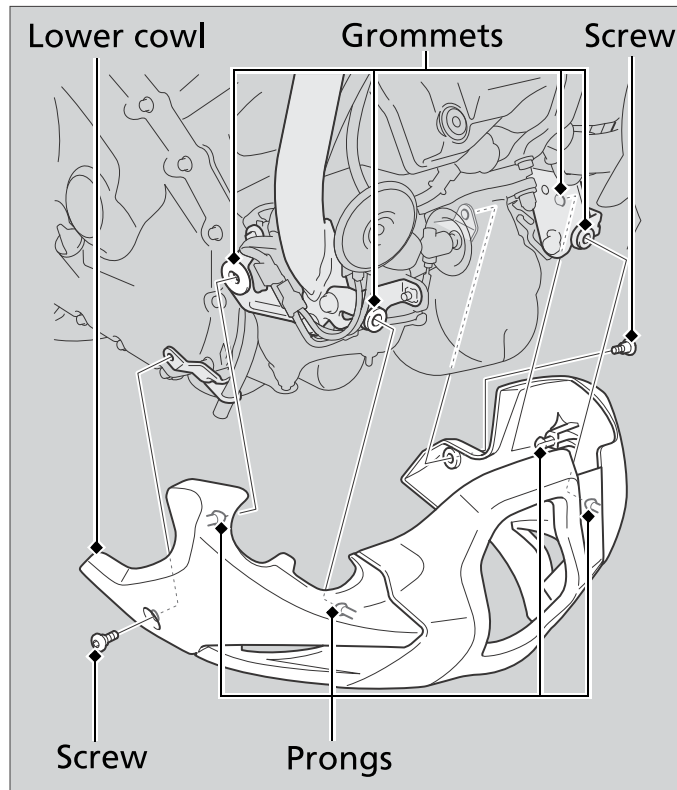

The lower cowl must be removed to service the coolant reserve tank, to replace the engine oil filter.

Removal

1. Remove the screws.
2. Remove the lower cowl, then remove the prongs from the grommets.

Installation

Install the parts in the reverse order of removal.