

## Engine Oil ► Changing Clutch Oil Filter (NC700SD only)

3. Install the new clutch oil filter with the rubber seal facing in, toward the engine. You will see "OUT-SIDE" mark on the clutch oil filter body, toward the filter cover.
4. Replace the O-ring and apply a thin coat of engine oil to the new O-ring when before installing it.
5. Install the spring and the clutch oil filter cover.
6. Install the clutch oil filter cover bolts and tighten.
7. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.  
▶ P. 73
8. Install a new engine oil filter and tighten.

**Torque:** 26 N·m (2.7 kgf·m, 19 lbf·ft).

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 30 N·m (3.1 kgf·m, 22 lbf·ft).

10. Fill the crankcase with the recommended oil (▶ P. 57) and install the oil fill cap/dipstick.

### Required oil

**When changing oil, engine oil filter & clutch oil filter:**  
3.4 litres (3.6 US qt, 3.0 Imp qt)

11. Check the oil level. ▶ P. 70
12. Check that there are no oil leaks.
13. Install the lower cowl.