

Drive Chain ▶ Adjusting the Drive Chain Slack

5. Inspect the sprockets. P. 58
6. Clean and lubricate the drive chain.
 P. 59



Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

(NC700SA/SD only)

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Place your motorcycle on the side stand on a level surface.
2. Stop the engine. Place the transmission in Neutral.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both sides of the swingarm.

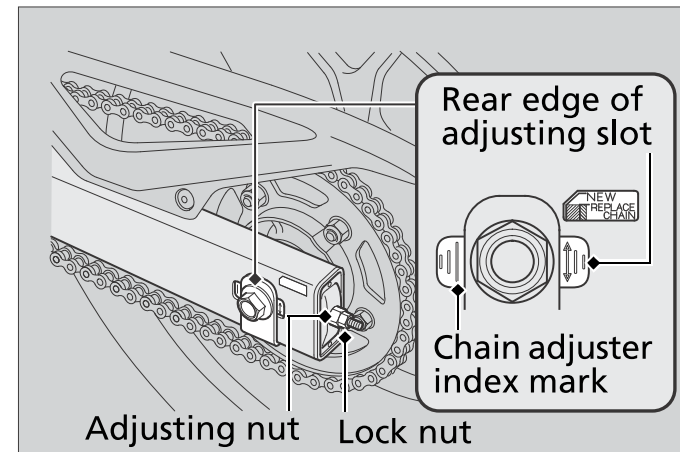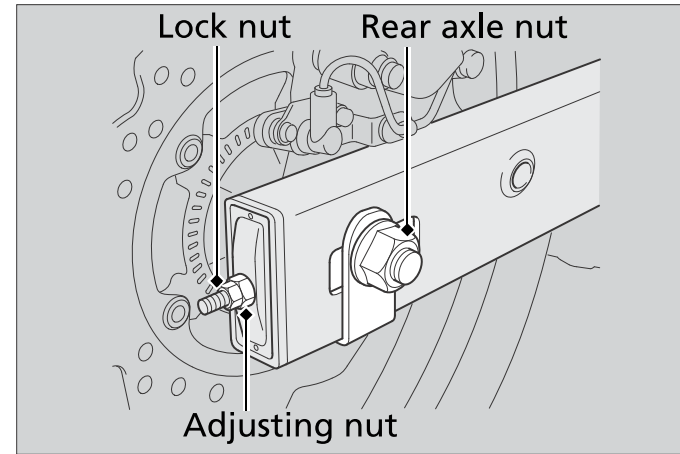

Maintenance

continued 83