


Clutch ▶ Adjusting the Clutch Lever Freeplay (NC700S/SA only)

Adjusting the Clutch Lever Freeplay (NC700S/SA only)

Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

1. Loosen the upper lock nut.
2. Turn the upper clutch cable adjuster until the freeplay is 10 to 20 mm (0.4 to 0.8 in).
3. Tighten the upper lock nut and check the freeplay again.

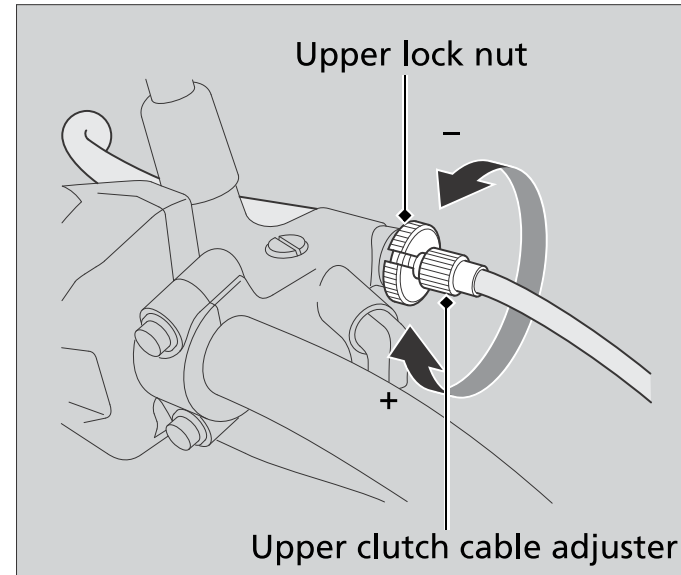

Maintenance

Lower Adjustment

If the upper clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the lower adjusting nut.

continued 87