FEATURES

(Not essential for running the motorcycle)

STEERING LOCK

To lock the steering, turn the handle bar all the way to the left and turn the key (1) to the "LOCK" position while pushing in. Remove the key.

 
A WARNING

 Do not turn the key to LOCK while riding the scooter because you will lose control of the vehicle.



- (A) PUSH IN
- (B) TURN TO "LOCK"
- (C) TURN TO "OFF"
- (1) Ignition key

TO LOCK



TO UNLOCK