


FRONT FAIRING


To remove the front cover (1) remove the eight screws (2) securing the inner cover (3). Remove the inner cover. Remove the cover. Installation is in the reverse order of removal.

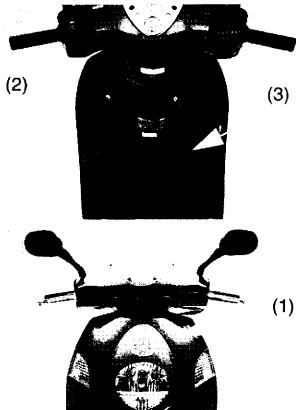

- (1) Front cover
- (2) Screws
- (3) Inner cover

LOWER CENTRAL COVER

Lift the seat up. Remove the center cover (2) screw (1). Remove the clips (3) from the right and left side of the cover. Remove the cover. Installation is in the reverse order of removal.

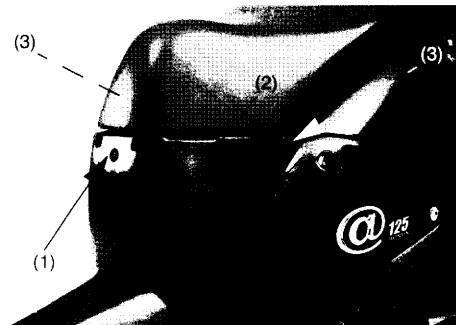

- (1) Screw
- (2) Center cover
- (3) Clips