


4. Remove the belt cover duct assembly from the belt case (1) take out the bolts (2).
5. Remove the duct cover cap (3) releasing the tongue (4).
6. Remove the element (5).
7. Wash the element in a clean non-flammable solvent or high flash point solvent and let it dry thoroughly.

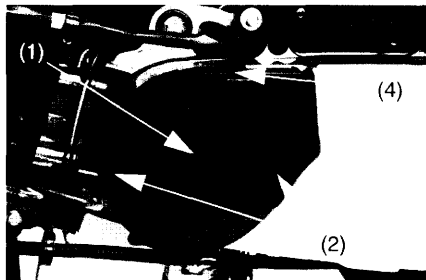

- (1) Belt cover duct assembly
- (2) Bolts
- (3) Duct cover cap
- (4) Tongue
- (5) Element

⚠ WARNING

- **Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.**

CAUTION

- **Allow the element to dry thoroughly before refitting.**
 - **Do not use oil on the element, this will damage the drive belt.**
8. For installation carry out the removal procedure in reverse order.

