


Headlight bulb

1. Remove the front cover (page 43).
2. Remove the two screws on the front headlight bar (1).
3. Remove the dust cover (2).
4. Take out the two connectors (3).
5. Release the catch (4).
6. Take out the bulb (5).
7. Fit a new bulb and reinstall in the reverse order of removal.

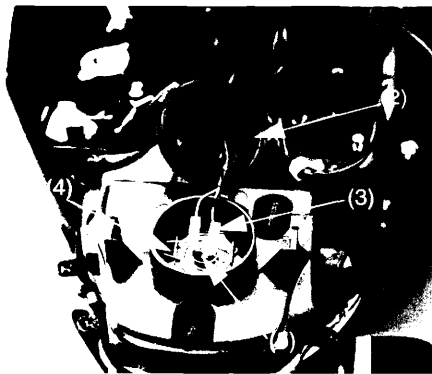

- (1) Screws
- (2) Dust cover
- (3) Connector
- (4) Catch
- (5) Bulb