

Ref. No.	Description	Function
1	Speedometer	Shows riding speed.
2	Odometer	Shows accumulated mileage.
3	Fuel gauge	Shows approximate fuel supply available (see page 11).
4	Turn signal indicator	Flashes when either turn signal is operated.
5	Oil level warning light (red)	<p>Light should come on for 5 seconds after the ignition switch ON, then go out, except for occasional flickering near or at the lower oil level. If light comes on and does not go out, oil level is below normal operating range; there is about 0.3 ℓ (0.32 US qt., 0.26 Imp. qt.) left in the engine oil tank. Refill the oil tank as soon as possible. If light does not come on, there is a fault in the oil level warning system.</p> <p><b>CAUTION:</b>  * Running the engine with insufficient oil will cause serious engine damage.</p>
6	High beam indicator	Lights when the headlight is on high beam.