

MAJOR COMPONENTS (Information you need to operate this motorcycle)


▲ WARNING

* If the Pre-ride Inspection (page 28) is not performed, severe personal injury or vehicle damage may result.

BRAKES

Adjustment:


1. Measure the distance the front brake lever (1) and the rear brake lever (2) move before each brake starts to take hold. Free play at the tips of the brake levers should be:
10–20 mm (3/8–3/4 in)

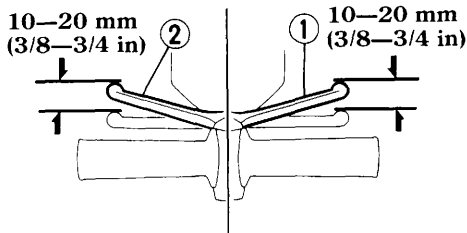

(1) Front brake lever (2) Rear brake lever

2. Make free play adjustments by turning the adjusting nut (3) at the brake arm.

FRONT

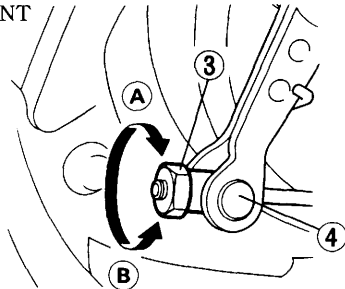

(3) Adjusting nut
(4) Brake arm pin

(A) Decrease free play
(B) Increase free play