


STARTING THE ENGINE

The motorcycle has an automatic fuel cock and choke; there is no manual operation.

NOTE:

- * Operate the kickstarter or starter button for slightly longer than usual without opening the throttle if the motorcycle has been left standing for a long time or when the fuel tank has just been refilled.

1. Place the motorcycle on its center stand.

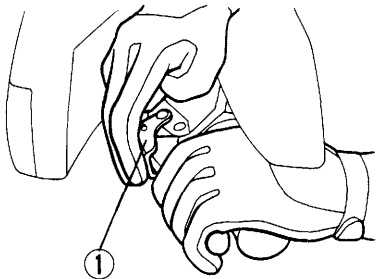

(1) Lock lever


2. Lock the rear wheel by squeezing the brake lever and setting the lock lever (1).

▲ WARNING

- * **The rear wheel will spin if not restrained by the brake or by contact with the ground. Accidental contact with a spinning rear wheel could cause personal injury.**

NOTE:

- * The electric starter will only work when the brake lever (2) is operated.

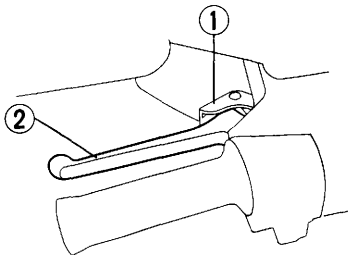

(2) Rear brake lever