


If the engine does not start:  
Open the throttle 1/8 - 1/4 turn while starting  
the engine.

1/8 - 1/4 turn

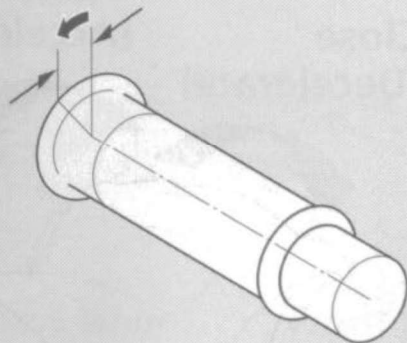

**If Engine Will Not Start** ➔ P. 75