


Changing Spark Plug

For the recommended spark plug, see "Specifications." ➔ P. 105

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using spark plug with an improper heat range can cause engine damage.

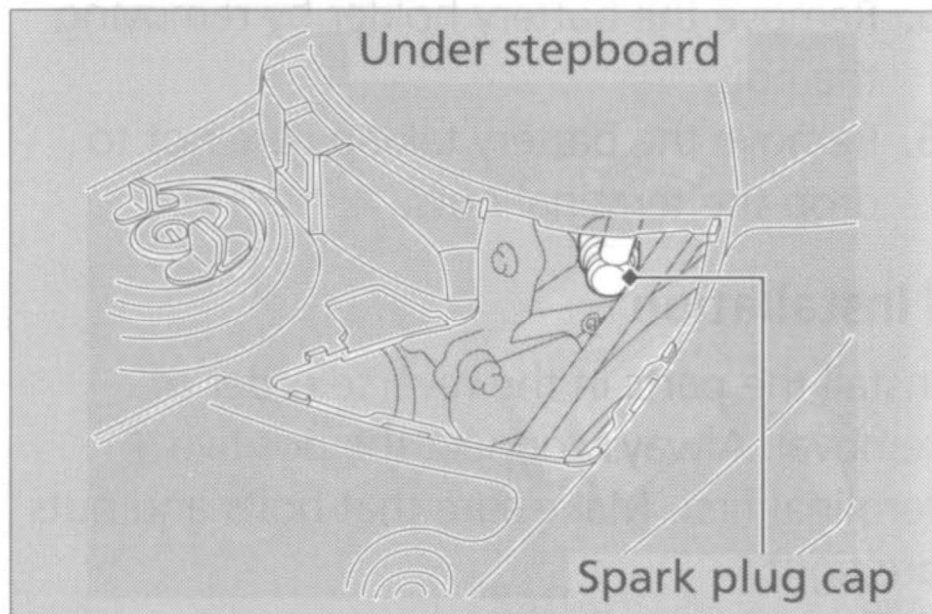

1. Remove the maintenance lid. ➔ P. 53
2. Disconnect the spark plug cap from the spark plug.
3. Clean any dirt from around the spark plug base.
4. Remove the spark plug using a spark plug wrench.
5. Install the new spark plug. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.