


FINAL DRIVE OIL

Oil Level Check

Check the final drive oil level when specified by the maintenance schedule (page 113).

1. Place the motorcycle on its side stand.
2. Remove bolt A (1), bolt B (2) and washer.
3. Pull out the prong (3) from the grommet (4), and remove the final gear cover (5).

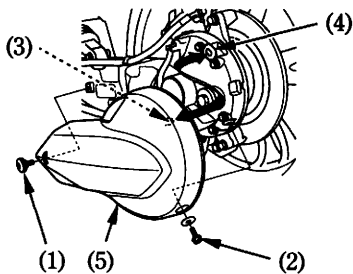


- (1) Bolt A
(2) Bolt B
(3) Prong

- (4) Grommet
(5) Final gear cover

4. Remove the oil filler cap (6).
5. Check that the oil level reaches the lower edge of the oil filler inspection hole (7).

If the level is low, check for leaks. Pour fresh oil through the oil filler inspection hole until it reaches the lower edge of the opening.

Recommended Oil: HYPOID GEAR OIL SAE 80

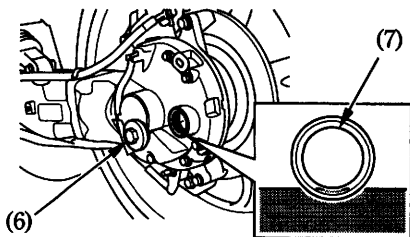

- (6) Oil filler cap (7) Oil filler inspection hole