

Switching D Mode and S Mode When the Automatic Shift Mode Is Selected


Press the shift switch (1) to change the D mode and the S mode while the automatic shift mode is selected.

Switching D mode to S mode:

Press the shift switch (−) (2) to switch to the S mode and the S mode indicator (3) comes on.

Switching S mode to D mode:

Press the shift switch (+) (4) to switch to the D mode and the D mode indicator (5) comes on.

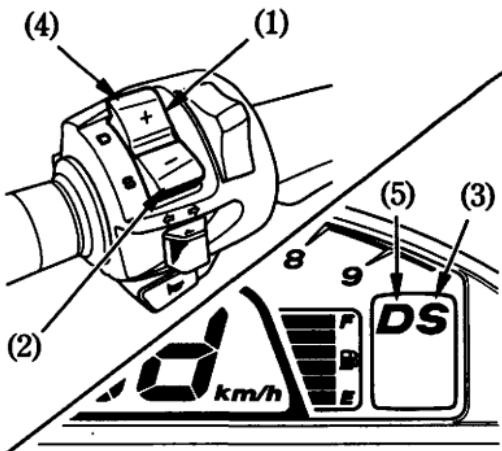

(1) Shift switch

(2) Shift switch (−)

(3) S mode indicator

(4) Shift switch (+)

(5) D mode indicator