


Front seat

To remove the front seat (1), remove the rear seat (page 71) and mounting bolts (2), and then pull the seat back and up.

To install the seat, insert the front tabs (3) into the recesses and the rear tabs (4) into the rear stay (5) on the frame, and tighten the mounting bolts securely.

Install the rear seat.

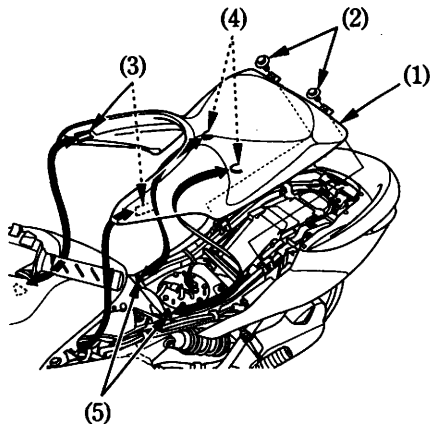

- (1) Front seat
- (2) Mounting bolts
- (3) Front tabs

- (4) Rear tabs
- (5) Rear stay