



1. Park your motorcycle on a firm, level surface.
2. Remove the right side cover (page 76).
3. Remove the right under cowl (page 82).
4. Place a drain pan under the crankcase.

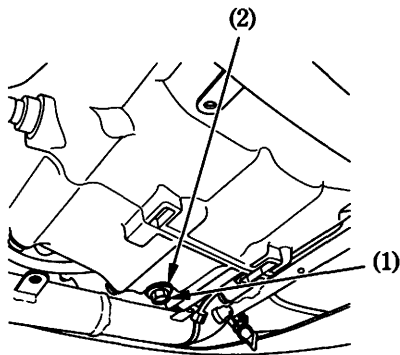

5. To drain the oil, remove the oil filler cap, oil drain bolt (1) and sealing washer (2).
6. Remove the engine oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the engine oil filter.

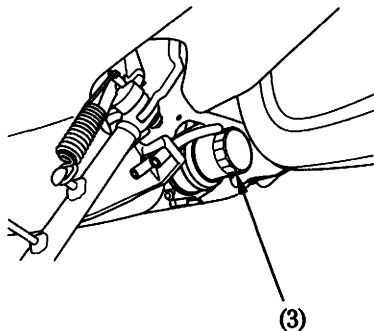

(1) Oil drain bolt

(2) Sealing washer

(3) Engine oil filter