


4. After the oil has completely drained, make sure the sealing washer on the drain plug is in good conditions.
5. Install the drain plug to the specified torque.
Drain plug torque:
21 N.m (2.1 kgf.m, 15 lbf.ft)
6. Fill the crankcase with recommended grade oil; approximately:
0.7 l (0.7 US qt, 0.8 Imp qt)
7. With the motorcycle upright on level ground, start the engine and let it idle for a few minutes. Stop the engine and check that the oil level is at the upper level mark in the inspection window with the motorcycle upright position.
8. If required, remove the oil filler cap and add the specified oil up to the upper level mark. Do not over fill. Install the oil filler cap.
Check for oil leaks.

CAUTION :

- **Running the engine with insufficient oil can cause serious engine damage.**

NOTE :

- Please dispose of used transmission oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local service station for reclamation. Do not throw it in the rubbish or pour it on the ground.

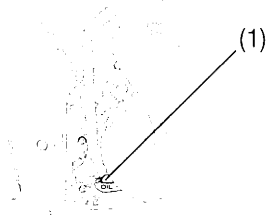

(1) Inspection window