

Installation notes :

Reverse the removal procedure.

Tighten the wheel nuts to the specified torque.

Wheel nut torque:

108 N.m (11.0 kgf.m, 80 lbf.ft)

After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

⚠ WARNING

- **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead loss of braking capacity.**