

FUSE REPLACEMENT

(Refer to the maintenance precaution on page 58)

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION :

- **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

⚠ WARNING

- **Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

