

## **ABS Indicator Light (NSS250EX)**

Normally, this light comes on when the ignition switch is turned ON, and goes off after you ride the scooter at speed above 10 km/h (6 mph). If there is an ABS problem, the indicator light comes on and remains on. The ABS system does not operate when the ABS indicator light is on.

If the ABS indicator light comes on while riding, stop the scooter in a safe place and turn off the engine.

Turn the ignition switch ON again. The light should come on, and go off after you ride the scooter at speeds above 30 km/h (19 mph). If it does not go off, ABS is not functioning, but the brakes still work the Combined Brake System and provide normal stopping ability. However, you should have the system checked by your Honda dealer as soon as possible.

The ABS indicator light may come on if you turn the rear wheel while the scooter is upright on the stand. This is normal. Turn the ignition switch OFF, then turn it ON. The indicator should come on, then go off after you run the scooter above 30 km/h (19 mph).