


Honda Smart Card Key

Carrying the Honda smart card key (1) allows you to lock or unlock the ignition switch, and to release the front seat lock, the console box, and fuel lid lock.

The ID number of the card key is on the ID tag (2) and the inside of the card key. You can also unlock the ignition switch (page 68) by inputting the ID number.

Always carry both the card key and ID tag, but store them in different places to avoid losing both at the same time.

Also store a copy of your ID number in a safe place other than your scooter.

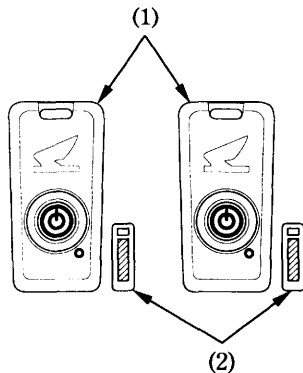

- (1) Honda smart card key
- (2) ID tag