


If the ID number is not checked through, the ignition switch illumination does not flash blue and the ignition switch can not be unlocked.

Pull out the EM connector and reconnect it to the connector. Follow the procedure again.

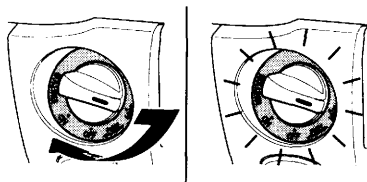

- Do not connect the EM connector except when unlocking in the ID number input mode.
- In case of emergency, store the removed EM connector in the tool kit.