


Switching Between Automatic Shift Mode and 6-speed Manual Mode

Switching Automatic Shift Mode to 6-speed Manual Mode:

Press the mode shift switch (1) once. The M mode indicator (2) lights and “M” icon mark (3) appears on the multi-function display. The current fuel consumption meter changes to the shift indicator (4) and shows gear position. When switching automatic shift mode to 6-speed manual mode, the gear is switched to the suitable position.

- The current fuel consumption meter is not displayed in the 6-speed manual mode.

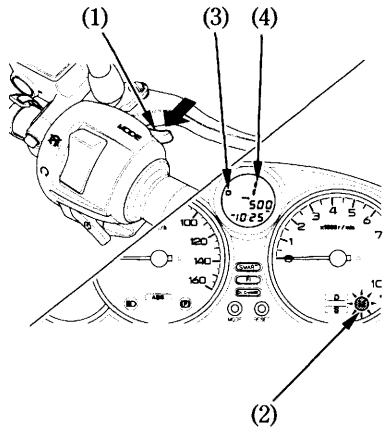

- (1) Mode shift switch
- (2) M mode indicator
- (3) “M” icon mark
- (4) Shift indicator