
 
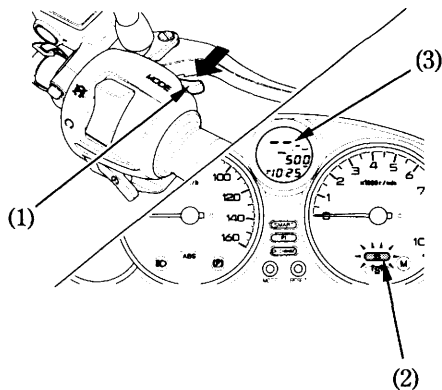


### Switching 6-speed Manual Mode to Automatic Shift Mode:

Press the mode shift switch (1) once. The D mode indicator (2) lights. Switches the shift indicator to the current fuel consumption meter (3) and shows the instant fuel consumption.

When switching 6-speed manual mode to automatic shift mode, the D mode is always selected.

- When turning the ignition switch ON, the D mode is always selected.
- When switching the engine stop switch from “” (OFF) to “” (RUN) while the ignition switch is ON, the D mode is always selected.
- If you press and hold the mode switch, the sequential mode switching can not be done.
- When switching automatic shift mode to 6-speed manual mode, the engine rev will fluctuate for selecting the suitable gear position for the speed.



- (1) Mode shift switch
- (2) D mode indicator
- (3) Current fuel consumption meter