

Switching D Mode and S Mode When the Automatic Shift Mode Is Selected


Press the shift switch (1) to change the D mode and the S mode while the automatic shift mode is selected.

Switching D mode to S mode:

Press the shift switch (-) (2) to switch to S mode and the S mode indicator (3) lights.

Switching S mode to D mode:

Press the shift switch (+) (4) to switch to D mode and the D mode indicator (5) lights.

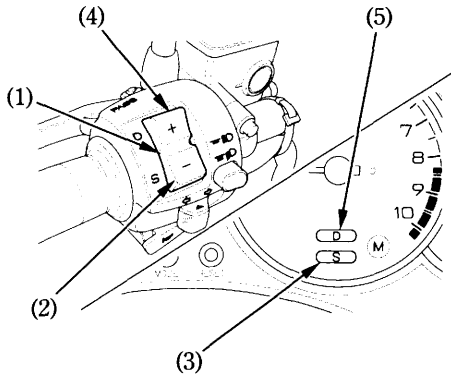

- | | |
|----------------------|----------------------|
| (1) Shift switch | (4) Shift switch (+) |
| (2) Shift switch (-) | (5) D mode indicator |
| (3) S mode indicator | |