


To unlock the front seat lock and the console box:

1. Open the retractable box (1) (page 99 ).
2. Insert the mechanical key (2) into the key cylinder (3) and turn it clockwise. The front seat lock and the console box will unlock at the same time.

Make sure the front seat lock and console box are securely locked before riding.

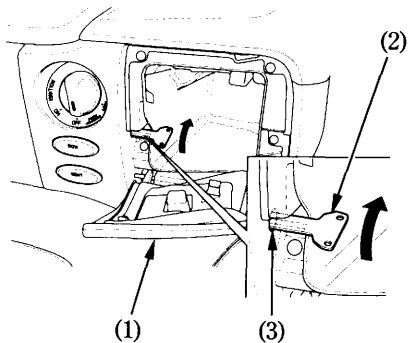

- (1) Retractable box
- (2) Mechanical key
- (3) Key cylinder