RETRACTABLE BOX

There is a retractable box (1) below the right side of the handlebar.

The maximum allowable load in the retractable box and console box shall be no more than

1.5 kg (3.3 lbs).

Do not open the retractable box while riding the scooter.

To open:

• Pull the knob (2) of retractable box cover (3).

To close:


Press forward until it is firmly closed.

Do not put the card key, mechanical key and ID tag in the retractable box. The card key system may not be activated.

Make sure the retractable box cover is closed before riding.

When washing your scooter be careful not to flood this area with water.

Do not store valuables or fragile articles in the retractable box.

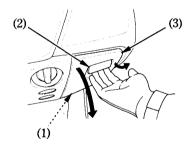

- (1) Retractable box
- (2) Knob
- (3) Retractable box cover