


3. Remove the air cleaner (3) by removing the screw B (4).
4. Discard the air cleaner.
5. Install a new air cleaner.
Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.
6. Install the removed parts in the reverse order of removal.

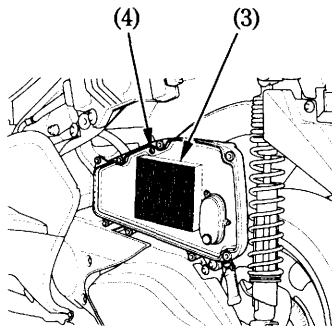

- (3) Air cleaner
- (4) Screw B