


## ENGINE OIL STRAINER SCREEN


1. To drain the oil, remove the oil filler cap/dipstick and oil drain bolt and sealing washer (page 148).
2. Remove the oil strainer screen cap (1), spring (2), oil strainer screen (3) and O-ring (4).

3. Wash the screen in clean solvent. Make sure the sealing rubber and O-ring are in good condition. Install the screen, spring and cap.

Oil Strainer Screen Cap Torque:  
15 N·m (1.5 kgf·m , 11 lbf·ft)

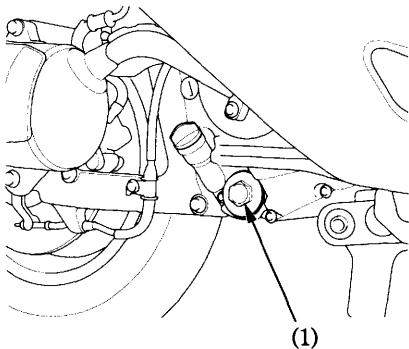

(1) Oil strainer screen cap

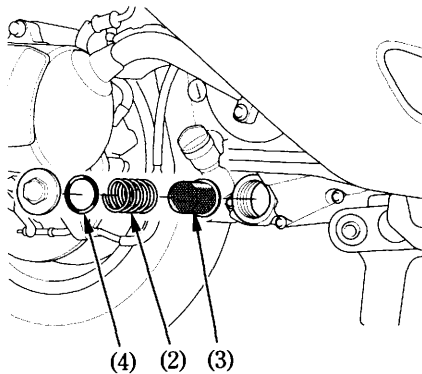

(2) Spring  
(3) Strainer screen

(4) O-ring