


BRAKE LOCK OPERATION

Refer to the Safety Precautions on page 131.

Parking Brake Inspection:

Stop the engine and push your scooter while fully pulling the parking brake lever to check the efficacy of the parking brake.

If adjustment is necessary, have the brake adjusted by your Honda dealer for this service.

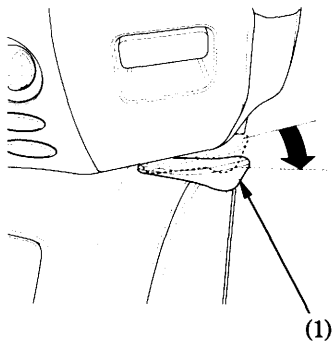

(1) Parking brake lever